


Quick Setup Guide

EdgeIPS Pro Bypass LAN Module

Available
to support
configurable
hardware
bypass

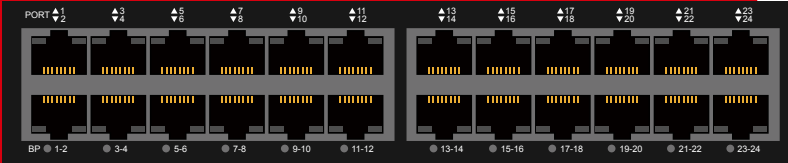

IPS Pro-Module-24C-GE-BP-TM

Before Installing Module Card

- Review the release notes for your product for any late-breaking changes to the installation instructions.
- Read and follow all safety information listed, and be certain to power off the device before you install the Bypass LAN Module.

ESD Requirements

Damage from Electrostatic Discharge (ESD) can occur when you handle electronic components improperly. Improper handling can also result in total or intermittent system failures. Use proper ESD protection whenever you handle equipment. Follow these general grounding guidelines:


- Review the release notes for your product for any late-breaking changes to the installation instructions.
- Avoid touching the circuit boards or connectors on all cards and modules.
- Avoid contact between printed circuit boards and clothing. The wrist strap only protects components from ESD voltage on the body. ESD voltage on clothing can still cause damage.

Place a removed component board-side-up on an antistatic surface or in a static-shielding container that is also grounded to the same point as the device. If you plan to return the component to the factory, immediately place it in a static-shielding container.

Adding ByPass Module

Step 1. EdgelIPS Pro installation slot priority

1-1. EdgelIPS Pro-1048: Slot 1, Slot 2

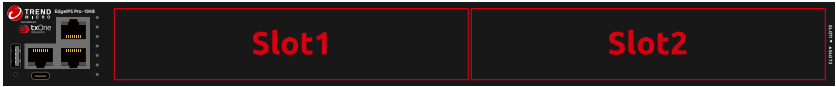


1-2. EdgelIPS Pro-2096: Slot 1, Slot 2, Slot 3, Slot 4



Step 2. Remove the protective damper covering the empty slot on EdgelIPS Pro-1048 or 2096.


Step 3. Insert the LAN module into slot 1, slot 2, slot 3, or slot 4. Please slide the module into the empty module slot and fix the slide lock.

3-1. EdgelIPS Pro-1048: Slot 1, Slot 2

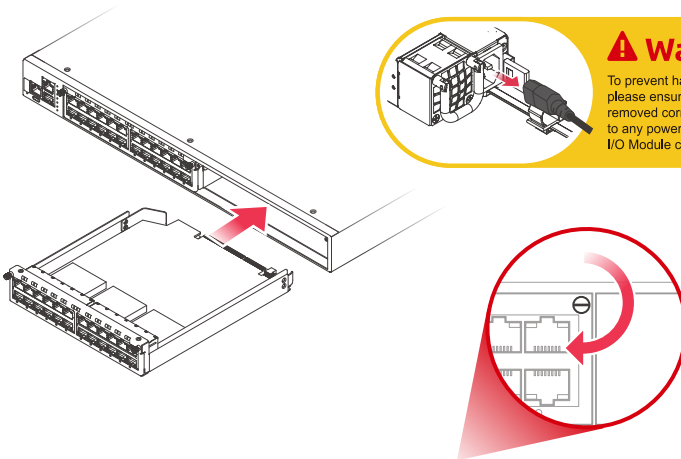


Warning

To prevent hardware failures or damages, please ensure that the power cord is removed correctly and not connected to any power source, then change your I/O Module card.

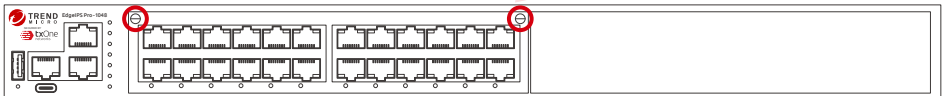

3-2. EdgeIPS Pro-2096: Slot 1, Slot 2, Slot 3, Slot 4

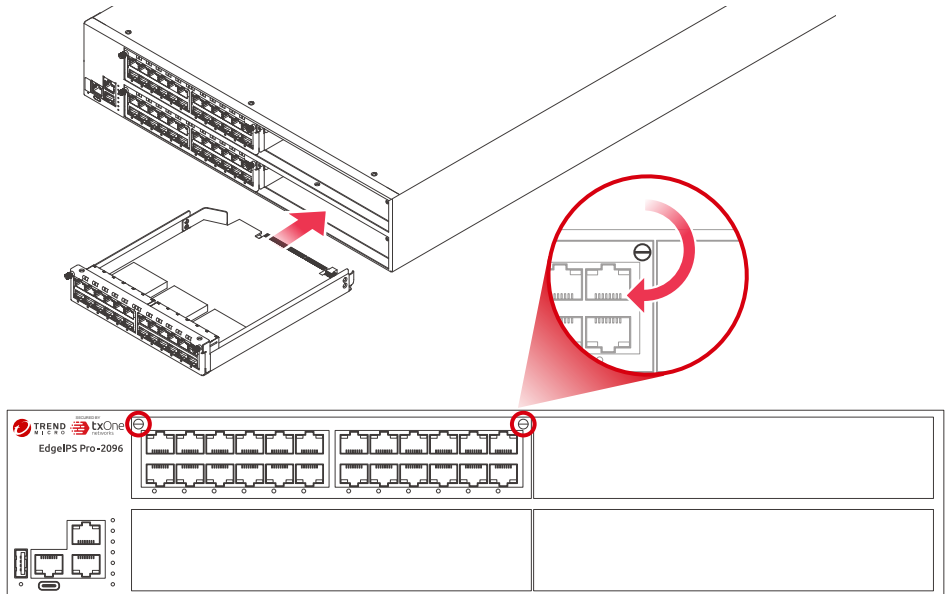

Step 4. Power on the device.

Contact Information

Website

<https://www.trendmicro.com>

List of worldwide offices and phone numbers

<https://www.trendmicro.com/us/about-us/contact/index.html>

Technical support page

<https://success.trendmicro.com/>

EULA

https://www.trendmicro.com/en_us/about/legal.html

EdgeIPS Pro Datasheet/Application Note Landing Page

